

reflecto

APPLICATION INSTRUCTIONS

COMPLETE CHEVRON SET



THANK YOU

for choosing our pre-cut chevron set!

We have cut the marking sheets especially for your car model, taking into account every single curve and all grooves.

In order to tailor our customer services as well, we would like to know your opinion on your order experience with us. Did you find it easy to order the chevron set? Are you content with the product quality? Would you like to see any changes in the order process?

We are grateful for all kinds of feedback. You could write an email to info@reflexfolie.de or a review for our shop – your help and opinion are much appreciated.

Of course, we would be very happy if you ordered with us again and recommended us to friends, family or colleagues.

We are looking forward to hearing from you soon!

CARE INSTRUCTIONS







- ▶ First rinse the film with a hose in order to remove any mud.
- ▶ To clean the marking sheets more thoroughly, use lukewarm water with the usual amount of regular detergent only. Use a sponge or a soft brush.
- ▶ Finally, rinse the film again with a hose.

⚡ IMPORTANT NOTES

Do not apply any abrasive agents or tools (e. g. a brush with nylon bristles) or any paint thinner. If you use a high-pressure cleaner, make sure to keep a distance of at least 40cm from the car. Do not aim the jet at the film edges.

For more information on the reflective film, please refer to the data sheet online.

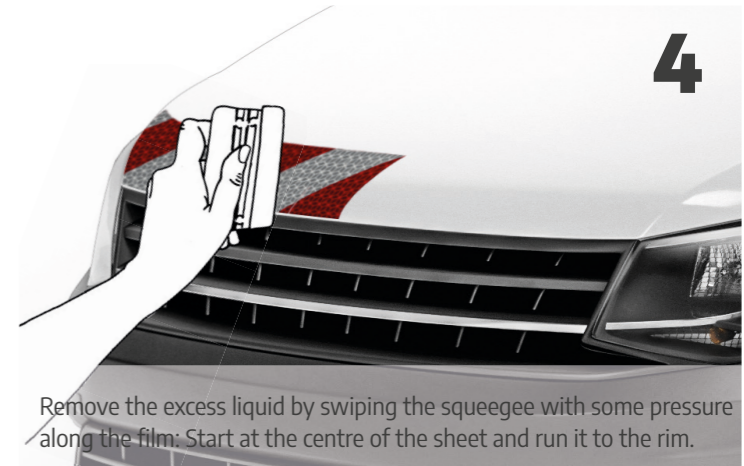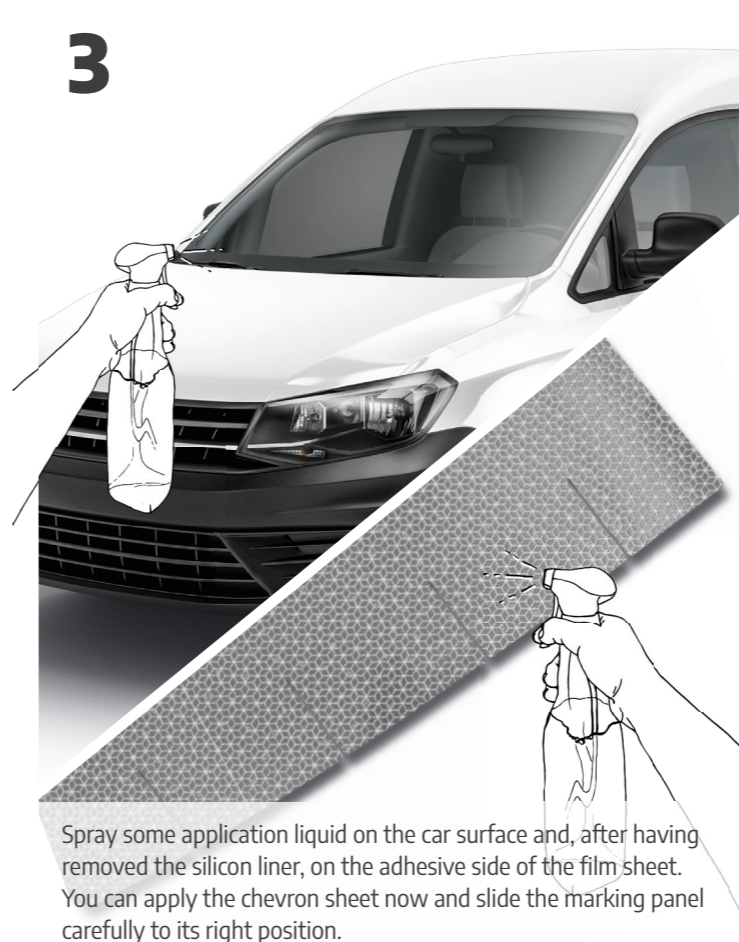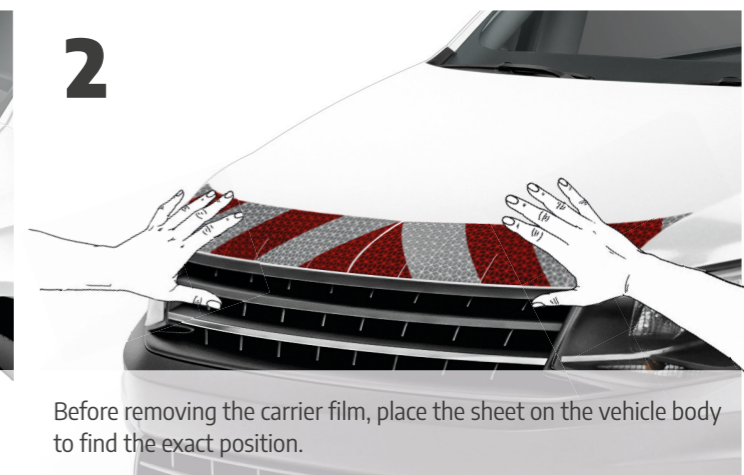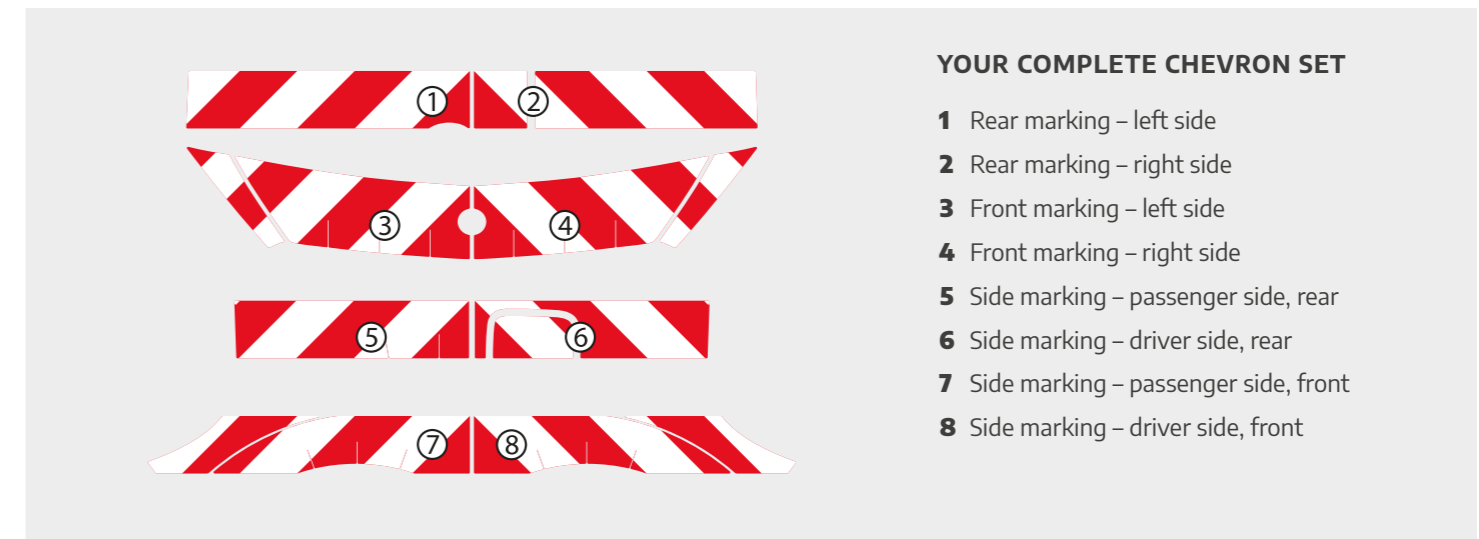

DONE!

*The pictures show a generic car model only and do not necessarily depict your particular vehicle.